





1  
Open the App Store and in the search bar type Centurion Anywhere.



2  
Select the application and download.

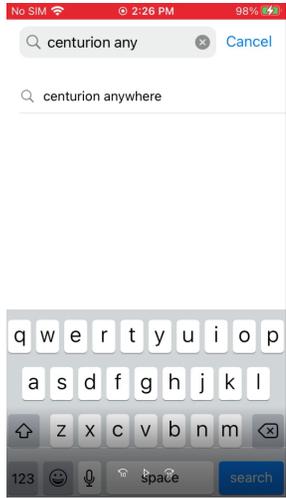

3  
Once you have downloaded the application, select to open the app.

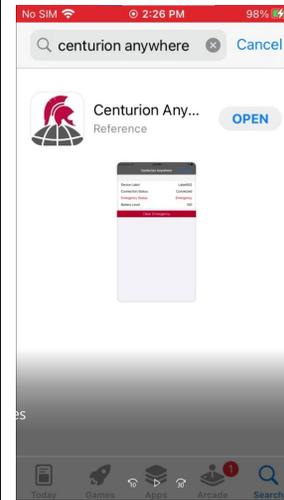

4  
The application will ask to send you notifications. Select Allow.



5  
Set your phone number by typing your phone number in the pop-up window and select Add


The app will ask you to confirm. Confirm yes by pressing ok.




6  
The application will ask to access your camera in order to scan the QR code.

Select ok to allow the scan.

This will open a camera view inside of the application.

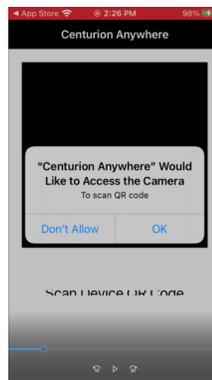


7  
Position this view over the LARGE QR code on the back of your Centurion Anywhere button.

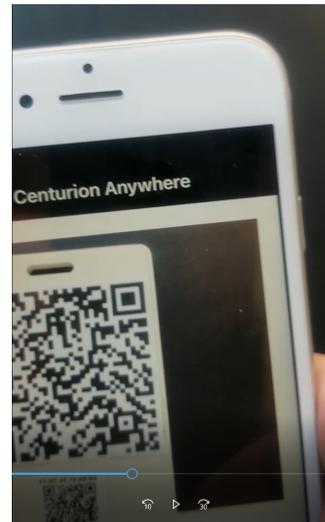

8  
The application will ask to use Bluetooth.

Select ok to allow.

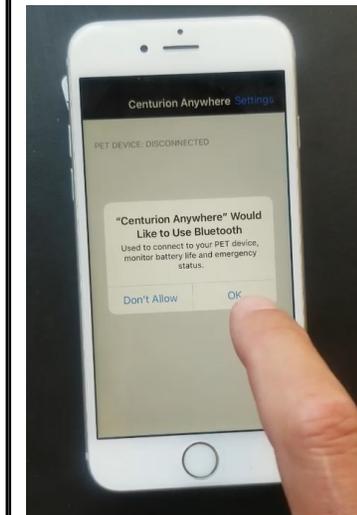


## iPhone Setup Instructions

9

Your iPhone will ask you when to allow the application to use your location.


Select “allow while using app”.

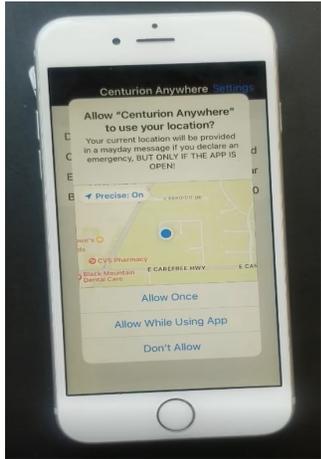

10

Your iPhone will ask you if you also want to allow the application to use your location when you are not using the app.


Select “change to always allow”.

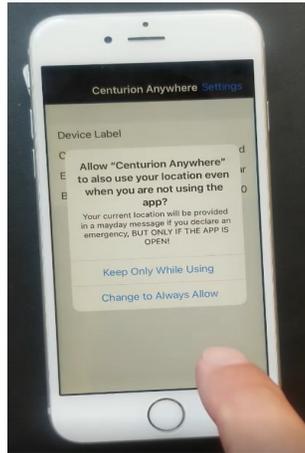

11

The app is now connected to the device and should display the Connection Status of “Connected”.


If this does not say “connected”, click settings and click Scan New QR Code to attempt to rescan. If this still does not connect, please see FAQ’s (link) for assistance.

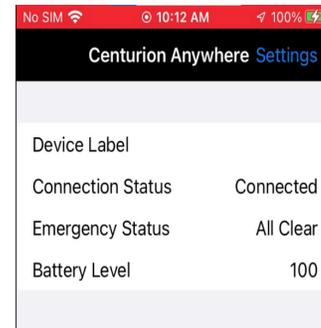

12

Also in the settings tab, be sure Background Service is enabled.

Click back to return to the main screen.

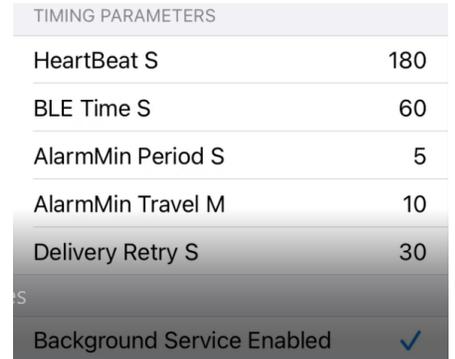

13

To activate your button, Press and hold the red dot on the button for 2 seconds.



14

Once this is properly activated, you will see a red light flash in the upper left corner of the badge

You will also see a Centurion Anywhere pop-up banner that says “Emergency Declared: Acquiring GPS location and sending mayday. “

15

A red bar will also appear that says “Clear Emergency”. To clear an emergency, simply press this “Clear Emergency” bar. As an alternative after one minute, the user can also clear by doing a quick, repetitive press on the panic button to clear the emergency.

The application will ask if you are sure you want to clear the emergency.

Select Clear.



Please note:

**In order to operate, your panic button must always be connected and within Bluetooth range of your device that it is paired to.**

When device is activated, notifications with your exact location will be send to a predetermined group of responders based on the requirements of your organization.

The criteria or reasons for which you activate your button will also be determined through policies of the organization.

